

To change the batteries on the 4-Button Key Fob:

1. Remove the screw from the back of the key fob.
2. Separate the key fob's faceplate from its backplate.
3. Slide the existing battery out from under the metal battery clip on the printed circuit board.
4. Insert the replacement CR2032 3V battery into the metal battery clip on the printed circuit board. The plus (+) sign on the battery should be facing up and the minus (-) side facing down as illustrated below.
5. Replace the printed circuit board into the faceplate of the key fob.
6. Replace the key ring in the space provided at the bottom of the fob. Then snap the key fob faceplate and backplate closed.
7. Secure the screw into the back of the key fob.



If you require assistance with any step of your battery installation please contact us at **1-866-476-0420**.