


To change the batteries on the Motion Detector:

- Remove the screw from the bottom of the cover.
- Remove the cover from the back-plate using a bottom-to-top lifting motion.
- Insert the CR123-A battery. Always match the plus (+) sign on the battery with the flat side of the compartment and the minus (-) sign on the battery with the spring side.
- Replace the Motion Detector cover and screw.

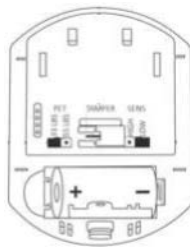

If you require assistance with any step of your battery installation please contact us at **1-866-476-0420**.