


LED Guide

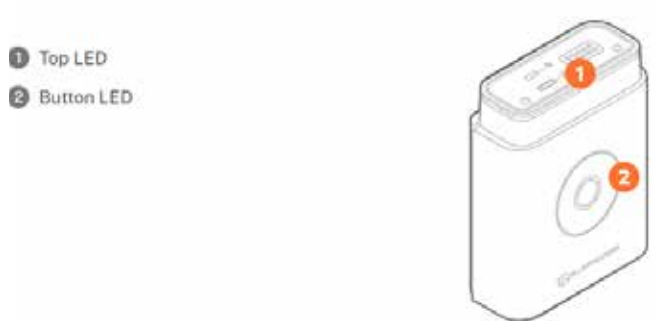

Button light guide

Operational States

Mode	Description	Button LED Behaviour
Standby or off	The camera is in standby mode (normal operation) or the battery is drained and requires recharging.	Off —————
Local connection	The camera has a local network connection.	Solid green —————
No local connection	The camera does not have a local network connection.	Solid red —————
Low Battery	The camera's battery is low and requires a recharge.	Alternating red and blue • • • • •
Connecting to network	The camera is powered on and connecting to the network.	Blinking red • • • • •
WPS mode	The camera is in WPS pairing mode. To enter this mode, press and hold the button for 30-45 seconds.	Blinking blue • • • • •
AP mode	The camera is in AP pairing mode. To enter this mode, press and hold the button for 46-60 seconds.	Blinking white • • • • •

Mode	Description	Button LED Behaviour
Power cycle	The camera is being power cycled. To enter this mode, press and hold the button for 61-75 seconds.	Blinking yellow ● ● ● ● ● ● ● ●
Factory reset	The camera resetting to factory default. To enter this mode, press and hold the button for 76-180 seconds.	Alternating red and green ● ● ● ● ● ● ● ●
Firmware upgrade	The camera's firmware is being upgraded.	Blinking yellow rapidly ●●●●●●●●●●

Charging States

Mode Description	Top LED Behavior	Button LED Behaviour
Charging The battery pack is plugged in and charging.	Solid orange <hr style="border: 1px solid orange;"/>	On button press Solid green = >75% charged <hr style="border: 1px solid green;"/> Solid orange = 75%-15% charged <hr style="border: 1px solid orange;"/> Alternating red and blue = <15% charged ● ● ● ● ● ● ● ●
Fully Charged The battery pack is fully charged.	Solid green <hr style="border: 1px solid green;"/>	On button press , solid green <hr style="border: 1px solid green;"/>

