 


## ONEPASS

### YOUR TICKET TO LIMITLESS ENTERTAINMENT

 
OnePass gathers every episode of a series available anywhere and adds all of them right to your My Shows list. If it's not available on TV or video on demand, OnePass fills in the gaps with episodes from providers like Netflix. To create a OnePass, find a show you want to watch, then choose *Create a OnePass* to set up your recordings.

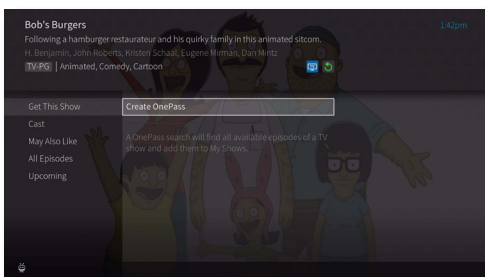

## THE SMARTBAR

### READY WHEN YOU ARE


The SmartBar, located at the bottom of the Home screen, predicts shows to watch based on what your household usually watches at a particular time or day. For example, if the kids tend to watch shows while dinner's cooking, their shows will be waiting in the SmartBar at that time each day.

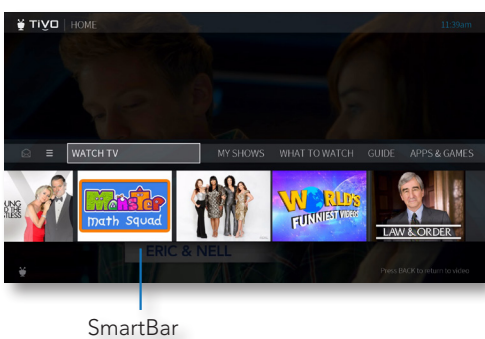

## MINI GUIDE

### NEVER MISS A THING

 
While you're watching video, press UP on your remote to reveal the mini guide. Use the mini guide to see what's upcoming on the selected channel, and to browse and switch to other channels.

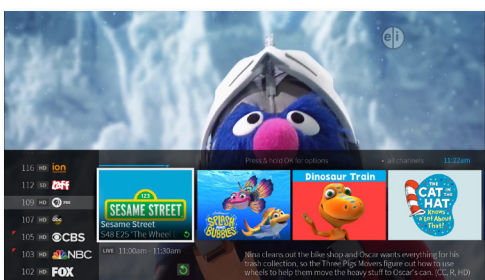

## WHAT TO WATCH

### BROWSING 2.0

 So many channels, so little time! TiVo's What to Watch lets you browse shows available to stream, watch live, bookmark, or record. From the Home screen, select *What to Watch*. On the What to Watch screen, press the LEFT button on your remote to view categories.

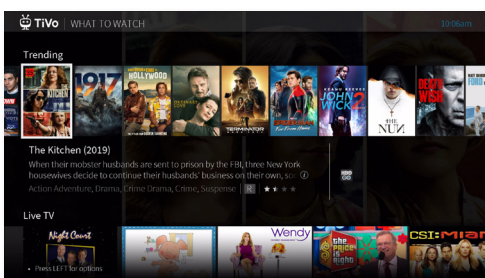

# eastlink



**GOT QUESTIONS?** Here's how you can always find answers:

- Find detailed instructions on how to use the many features of the TiVo Service at [tivo.com/howto](https://tivo.com/howto).
- Use the Help screens on your TiVo Stream DVR. Go to *Menu > Help > Tips & Troubleshooting*.
- Call Eastlink Customer Support at 1-888-345-1111 or visit us online at <https://my.eastlink.ca/customer-support>.

© 2022 Xperi. All rights reserved. TiVo, the TiVo logo, the TiVo silhouette logo, OnePass, Trick Play, the Jump logo, and the Instant Replay logo are trademarks or registered trademarks of trademarks of TiVo Brands LLC. Google, Android, Google Play, Android TV and other marks are trademarks of Google LLC. App Store is a service mark of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple. Netflix is a registered trademark of Netflix, Inc. All other trademarks and content are the property of their respective owners. Blue Ridge cabled territories only. All services are not available in all areas. Other restrictions apply.

The streaming device is powered by Android TV™.

Note: Some screen images may be simulated.

v.1.15 S6A (December 2022)

# The TiVo Experience

TiVo Stream DVR

## WELCOME TO THE TIVO® EXPERIENCE!

 
The TiVo experience instantly gives you total control of the TV programming you love, and much more!


With the Eastlink TiVo Stream DVR, you can record shows to watch later. Shows will be stored in the cloud for a specified period. Contact Eastlink at 1-888-345-1111 to request our Video service.

## HOME SCREEN

### START HERE FOR JUST ABOUT EVERYTHING.

The Home screen is the starting point for just about everything you do with your TiVo Stream DVR. From the Home screen, you can easily access popular destinations in the TiVo experience, get personalized recommendations from the SmartBar and What to Watch, and view settings.

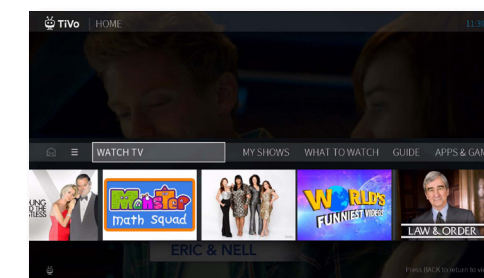


To get to the Home screen from anywhere in the TiVo experience, just press the TiVo button  on your remote control.

## MY SHOWS
 
### FIND. WATCH. REPEAT.


All of your recordings and streaming videos appear in My Shows. To get to My Shows from any menu screen or from live TV, just press the TiVo button to go to the Home screen, then choose *My Shows*.

Filters in the left column of My Shows let you narrow your choices instantly. As you highlight a filter, your My Shows list will update automatically. Filters include *TV Series*, *Movies*, *Kids*, and more.

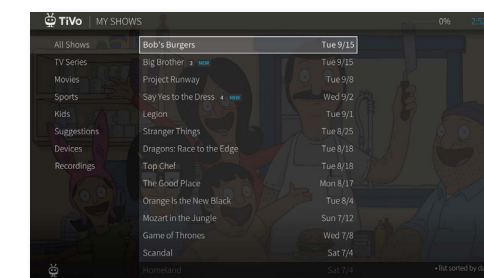


# EVEN MORE YOU CAN DO...

## SPEAK AND YOU SHALL FIND

Press and release the Google Assistant button  on your remote, and use your voice to find a show, open an app, or get recommendations to match your mood. Try saying things like "Bob's Burgers," "Romantic movies," or "Basketball games."


## ...OR SEARCH AND YOU SHALL FIND

 Don't feel like talking? Use keyboard search to enter a title, actor name, or keyword instead. Your TiVo device instantly scans across all TV programming, On Demand, and streaming video apps to find exactly what you want.

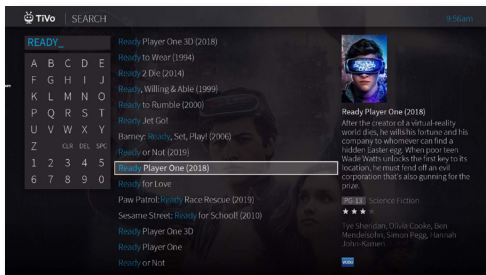

## SKIP THE SURFING

 To jump to one of your favorite channels while watching TV, press PAUSE to bring up the TrickPlay controls, then press DOWN to bring up your favorite channels.

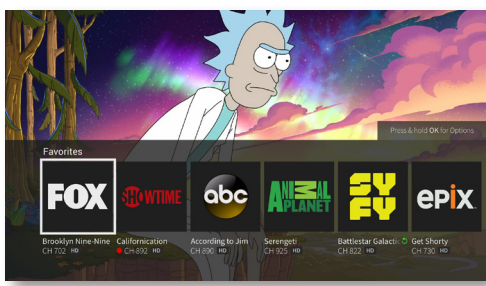


Press DOWN a second time to view the Continue Watching panel.

## TO SEE OR NOT TO SEE

 By default, when you press the TiVo button to go to the Home screen, the video you were watching continues to play in the background. As you move to other menu screens, the video continues playing in a video window in the upper right corner of the screen.

To watch the video in full screen, press the BACK button on your remote control.


To choose how to display video on the Home screen and other menu screens, or to turn it off completely, select *Menu > User Preferences > Video Window & Background*.

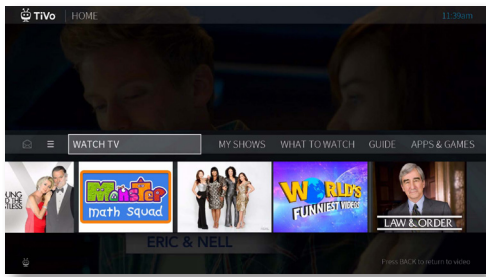

FULL SCREEN



 
TOP RIGHT

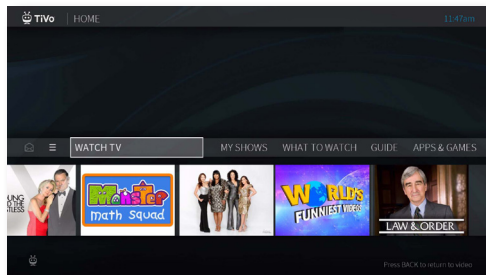

NO VIDEO ON HOME SCREEN

## THE TIVO REMOTE CONTROL

 - 1 The TIVO BUTTON takes you to the Home screen.
- 2 POWER button turns the TV on or off.
- 3 INPUT selects the input for your TV.
- 4 BACK goes back to the previous screen.
- 5 Use the ARROW BUTTONS to navigate the TiVo menus. When watching video, press OK to bring up TrickPlay controls, UP to see the mini guide and DOWN to see the full Info banner, Continue Watching panel, and Favorite Channels panel.
- 6 VOLUME and MUTE control the volume on your TV.
- 7 Press and release the Google Assistant button to talk to Google.
- 8 REPLAY repeats the last eight seconds of the show. In the Guide, REPLAY jumps 24 hours back.
- 9 Use the THUMBS UP and THUMBS DOWN confirm certain commands, as instructed on screen.
- 10 A opens the categories list in What to Watch. B changes the sort order of My Shows. C jumps to the next filter in My Shows. D removes a tile from the Continue Watching panel.
- 11 CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.

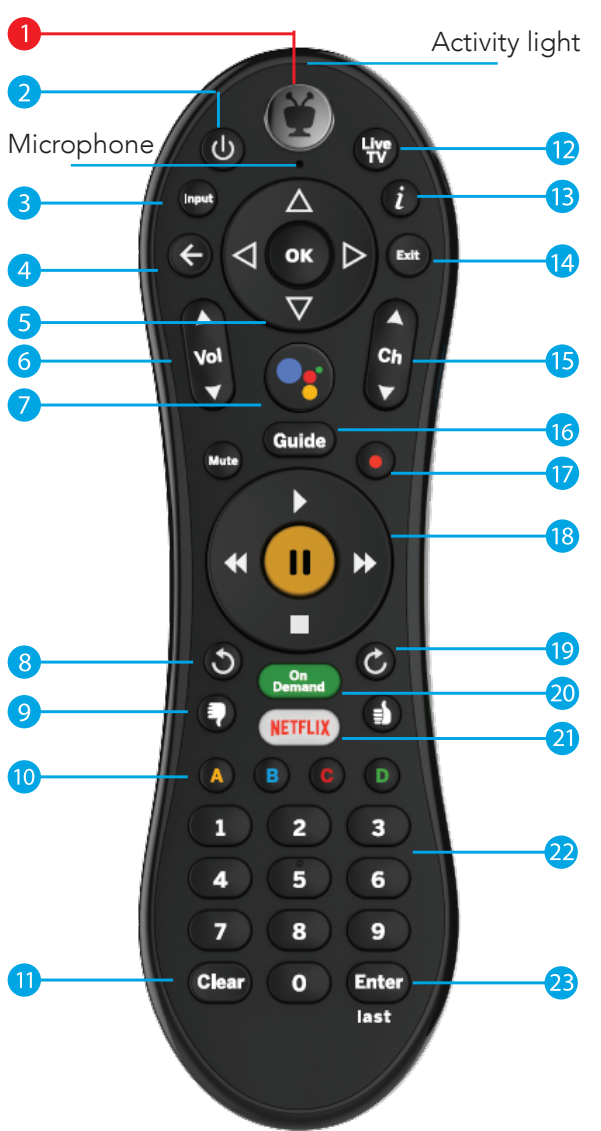

- 12 LIVE TV takes you to live TV.
- 13 "i" shows the Info banner while watching a show, or brings up an Info card when a title is highlighted in the TiVo menus. Press and hold for accessibility options.
- 14 Use EXIT to switch to full-screen video while using TiVo menus, or to jump back to the last channel viewed while watching live TV. Exit also exits a Restart/Catch Up show.
- 15 Use CHANNEL UP/DOWN to change the channel or move quickly through the Guide.
- 16 GUIDE takes you to the on-screen Guide.
- 17 Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.
- 18 Use the TrickPlay buttons (REWIND, FAST-FORWARD, STOP, PAUSE, and PLAY) to control video.
- 19 ADVANCE jumps forward 30-seconds. In the Guide, ADVANCE jumps forward 24 hours.
- 20 ON DEMAND jumps to the On Demand catalog.
- 21 The NETFLIX button launches the Netflix app.
- 22 Use the NUMBER BUTTONS to directly enter numbers (e.g., channel numbers or Parental Controls PIN).
- 23 ENTER/LAST displays the Continue Watching panel.